

Indoor Space Light Level Sensor

Installation Instructions & Data Sheet




(Typical image for illustration purposes only)

Installation

1. Choose an accessible location for the sensor which is a good representation of the light conditions in the area to be monitored. Avoid locating the sensor where it will be subject to direct sunlight, strong artificial lighting or dark shadowed locations. Temperature must not exceed -25°C to +70°C or humidity 0% RH to 95% RH.
2. Fix the backplate to a wall or junction box using the knockout mounting holes.
3. Insert cable through one of the knockouts and connect as per diagram below.
4. Click the fascia to the backplate.

Wiring Details

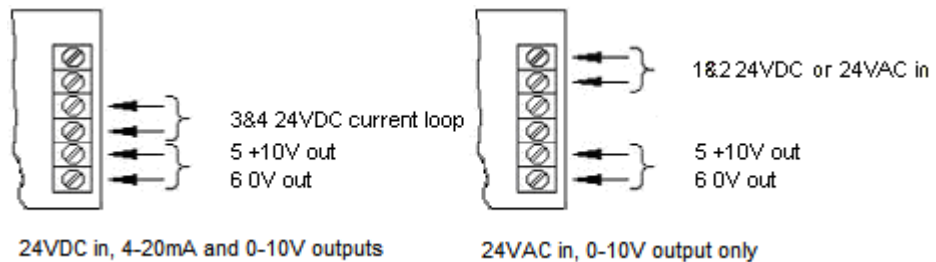

Range :	ALS-U-2K	10 – 2000 Lux
Output :	4-20mA/0-10VDC	

